



VSR-10 PRO

Instruction Manual



Table of Contents

1	SAFETY AND HANDLING	p.01
2	OVERVIEW	p.02
3	ASSEMBLY	p.02
4	BI-POD INSTALLATION	p.03
5	HOP-UP	p.03
6	SAFETY	p.03
7	BOLT-OPERATION	p.03
8	LOADING AND MAGAZINE REMOVAL	p.03/04
9	SUPPRESSOR ADAPTER	p.04
10	IMPORTANT NOTES	p.04
11	HOP UP EXAMPLES	p.04



Operation of this airgun is restricted from users younger than 18 years old.



Careless shooting may cause eye damage.




Always read manual carefully before operation.


1 SAFETY & HANDLING




Always read through this manual before operation

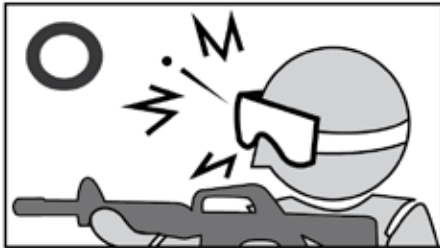

Make sure to wear eye protection.

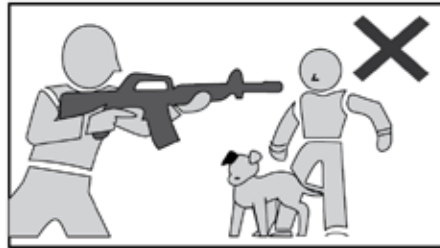


Don't train on people or animals.

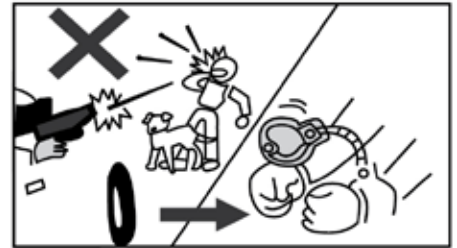


Don't shoot mischievously.




Don't look close to the muzzle.

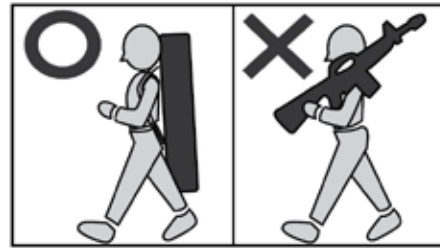

Use a bag or box when transporting.

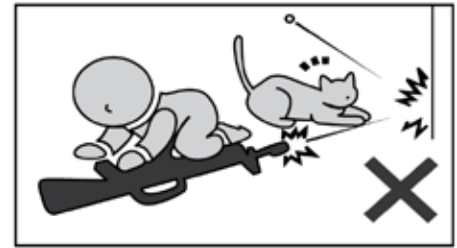

Keep out of the reach of children.

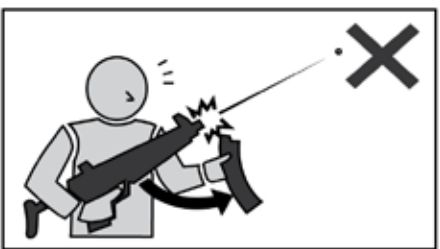


Gun may still fire with magazine removed.




Never shoot casually.




Practice safe muzzle control at all times.

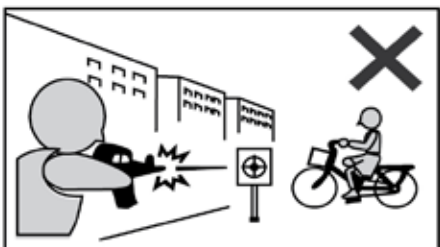

Don't shoot where there is people or transportation.

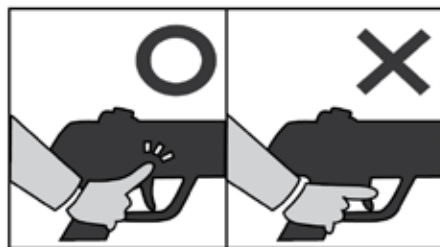

Keep finger off the trigger until you're ready to shoot a target.

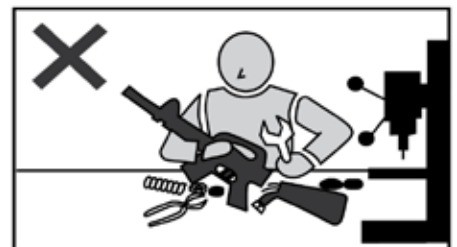

Do not dismantle or attempt repairs yourself.

2 OVERVIEW



- | | |
|---------------------------------|-----------------------|
| 1. Outer Barrel | 9. Suppressor Adapter |
| 2. Hop-Up | 10. Hardware |
| 3. Body | 11. Assembly Tools |
| 4. Bi-pod | 12. Sling |
| 5. Magazine | |
| 6. Jam Rod | |
| 7. Speed Loader | |
| 8. Extra Spring for mag release | |

3 ASSEMBLY



Install outer barrel by pushing the trigger assembly towards the back of the body.



Pay special attention to the lip near the trigger assembly to ensure a correct fit.



After trigger assembly is seated correctly, press downward at the front of the rifle body to seat the outer barrel.



Install the longer screw at the rear of the body.



Install the smaller screw at the front of the body. Be sure the screw goes through the front rail.



Firmly tighten down both screws in a clockwise direction.

4 BI-POD INSTALLATION



Loosen bi-pod clamp by turning the screw counterclockwise.



Position bi-pod on to front rail and tighten clamp by turning clockwise.



Press down firmly on top of locking button to extended bi-pod legs.

5 HOP-UP



Hop-up adjustment is located at the front of the rifle.



Slide back to increase hop-up and forward to decrease hop-up.

6 SAFETY



Move slider backwards to engage safety.



When ready to fire, move slider forwards to disengage safety.

7 BOLT OPERATION



1. Pull bolt upwards.
2. Pull bolt all the way back.



1. Push bolt forward.
2. Lock bolt back into place.

8 LOADING AND MAGAZINE REMOVAL



Use the supplied speed loader to load BBs into the magazine (30 Rounds).



Install magazine as shown.



Press down firmly until magazine clicks into place.

Continued on next page

Continued from pg 2



Locate magazine release button in front of magazine.



Grasp on to the mag using the finger grooves. Press on the mag release and pull back to remove.

9 SUPPRESSOR ADAPTER



Remove the barrel cap by turning counterclockwise.



Install suppressor adapter by turning clockwise.



Tighten adapter firmly until completely seated.

10 IMPORTANT NOTES

The bolt pull on the VSR-10 Pro is very stiff when the rifle is new. Through regular use, the spring will loosen up and the bolt will become easier to pull.

Ensure that you complete a full bolt pull every time. If the bolt did not lock in place, remove the magazine and attempt to cycle the bolt again. After the cycle has been completed, the magazine can be re-inserted. If the magazine is not removed after an incomplete cycle and the bolt is pulled back a second time, another BB may be fed into the chamber. Double feeds can cause damage to the internal components and will void the Manufacturer's Warranty.

11 HOP UP EXAMPLES

